

Continue













## Black and decker dustbuster 7.2v manual

Given article text here B B B u u s t e u s t e r Catalog No. CHV7250 T T HANK YOU FOR CHOOSING HANK YOU FOR G . B . G . B O T O WWW LACKAND O T O WWW LACKAND T O REGISTER T O REGISTER BEFORE RETURNING THIS PRODUCT FOR ANY REASON PLEASE CALL 1-800-544-6986 BEFORE YOU CALL, HAVE THE CATALOG NO. AND DATE CODE AVAILABLE. IN MOSTCASES, ABLACK & DECKER REPRESENTATIVE CAN RESOLVE THE PROBLEM OVER THE PHONE. IF YOU HAVE A SUGGESTION OR COMMENT , GIVE US ACALL. YOUR FEEDBACK IS VITALTO BLACK & DECKER. To purchase a replacement filter call 1-888-678-7278. SAVE THIS MANUAL FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY. VEA EL ESPAÑOL EN LA CONTRAPOSITADA. INSTRUCTIVO DE OPERACION, CENTROS DE SERVICIO Y PÓLIZA DE GARANTÍA. ADVERTENCIA: LEASE ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO. Catalog No. CHV7250 Copyright 2008 Black & Decker FORM NO. 590020-01 REV. 2 When using electrical appliances, follow basic safety precautions such as reading and understanding all instructions before use, keeping children away, avoiding water or liquids, not vacuuming with wet/dry hand vacs, and storing the unit after each use. To use your cordless wet and dry vacuum safely, follow these guidelines: • Plug it directly into an electrical outlet (120V/60Hz) and only use the charger provided by the manufacturer. • Avoid using it with any other product or charger, as this can damage the device. Keep a safe distance from openings and moving parts, and avoid inserting accessories while the unit is running. Also, be careful not to touch the plug or appliance with wet hands. Never insert objects into the unit's openings, block its air vents, or vacuum up burning or smoking materials like lit cigarette butts or hot ashes. Keep it away from hot surfaces and use extra caution when cleaning on stairs. The device is intended for household use only and should not be used commercially or industrially. Always follow the manufacturer's instructions and recommendations for attachments. During routine maintenance or cleaning, unplug the charger before proceeding. Be aware that the device contains rechargeable nickel cadmium batteries, which can explode at high temperatures if incinerated improperly. If you accidentally get battery fluid on your skin or in your eyes, seek medical attention immediately. ••Operating Manual for Black & Decker Dustbuster CHV7250•• This manual is applicable for the -B1 and TW models only, and it's essential to read it carefully before using the appliance. The product is intended for domestic use only, and it's crucial to follow all safety instructions to avoid personal injury or damage. ••Important Safety Information•• • Always check that the power supply corresponds to the voltage on the rating plate. • Never attempt to replace the charger unit with a regular mains plug. • Keep the appliance away from eyes and ears when operating, and never expose it to rain. • Use extra caution when cleaning on stairs, and always maintain proper footing and balance. ••Battery and Charger•• • The battery must be charged for at least 16 hours before first use. • Double insulation does not take the place of normal safety precautions when operating this tool. ••Electrical Safety•• • The electric motor has been designed for one voltage only, so ensure that the power supply corresponds to the voltage on the rating plate. ••Maintenance and Repair•• • If the appliance is not working as it should, or if it's been dropped, damaged, or left outdoors, return it to a service center. • Never put any object into openings, and keep the appliance free of dust, lint, and other debris. To ensure safe and proper operation of your appliance, follow these guidelines: Keep loose items away from openings and moving parts. Avoid handling the charger or appliance with wet hands. Never pull the charger lead to disconnect it from the socket. Keep the charger lead away from heat sources, oil, and sharp edges. Don't insert accessories while the unit is running. Only operate appliances with undamaged cords and chargers. Return any damaged appliances to an authorized service facility. Keep your appliance away from sinks, hot surfaces, and stairs. Before use, inspect the appliance for damage or defects. Regularly check the charger lead for damage and replace it if necessary. Never attempt to repair or disassemble parts other than those specified in this manual. Follow proper maintenance instructions to ensure best performance and safety. In case of battery leaks, wash affected areas with soap and water or neutralize with a mild acid like lemon juice or vinegar. If the liquid gets into your eyes, flush them immediately for at least 10 minutes before seeking medical attention. 1. When not in use, keep the battery charged by connecting it to the charger plug. The battery will not charge when the on/off switch is in the off position. 2. Ensure proper mounting of the appliance to avoid any electrical wiring behind the wall and ensure a secure connection to prevent accidents. The instructions below outline steps for using your new product properly: Your local dealer should guide you through this process. Unplug the vacuum cleaner before maintenance. Press the release button and remove the dust bowl to access the filters. Clean the filters by replacing them with a soft filter into a hard filter, then refit the dust bowl ensuring it clicks into place. Refer to your owner's manual for cleaning instructions, as using not-recommended accessories may be hazardous. Cleaning is crucial for optimal performance; ensure the filters and dust bowl are clean before use. If dust falls back out of the product after switching it off, the dust bowl needs emptying. Unplug the vacuum cleaner before cleaning. Empty the dust bowl, wash if necessary, and dry completely before refitting. Regularly washing the filters with warm soapy water maintains their effectiveness. Ensure they are in position correctly before use. The exterior can be cleaned with a damp cloth and soapy water; always ensure it's dry before re-use or storage. Proper maintenance is essential for product safety and reliability; refer to your owner's manual for authorized service centers. The unit contains no user-serviceable parts inside. If you need to dispose of an old Black & Decker appliance or battery pack, follow these steps: 1. Remove any screws or clips holding the battery in place (Fig. N). 2. Take hold of the battery casing and pull the battery out of the appliance (Fig. O). 3. Place the battery in suitable packaging to prevent short-circuits. 4. Take the battery to a local recycling station. As a customer, it's your responsibility to ensure proper disposal or recycling of the battery pack. If you need service for your Black & Decker appliance, contact your local council for information on disposal and repair options. Additionally, note that: • Black & Decker offers a network of authorized service locations throughout Asia. • Product specifications may vary by country, so it's best to check with your local dealer for range availability. • The company reserves the right to change product specifications without prior notice. ••International Service Centers•• The following companies are authorized service centers for Black+Decker products: 1. ••Raka•• (Saudi Arabia): +966-38140914, danchubby@gmail.com 2. ••Fawaz Ebrahim Al Zayani Trading Est.~•• (Kuwait): +965-24848595, alexotc@usa.net 3. ••Aces Service Centre~•• (Lebanon): +9611-898989, nissrine.hajj@aces.com.lb 4. ••Homeworld Co.~•• (Libya): +218-619094183, nagte.ly@gmail.com 5. ••Bruth Al Hadatha~•• (Libya): +218-916611663, elghol@technpower.com 6. ••The Branchouse Ltd.~•• (Mauritius): +230-2069450, service.centre@goupille.mu 7. ••Oman Marketing & Service Co. (Omasco)~•• (Oman): multiple phone numbers and email addresses 8. ••Ammar Service & Spares~•• (Pakistan): +9221-32775252, babji93@yahoo.com 9. ••Al Muflih Service Centre~•• (Qatar): +974-44650880, service@almuflih.com 10. ••Societe Tunisienne De Maintenance (STM)~•• (Tunisia): +216-79389687, importa@stgu.com 11. ••Black+Decker Light Industrial Unit~•• (UAE): multiple phone numbers and email addresses 12. ••Light House Electrical~•• (UAE): multiple phone numbers and email addresses 13. ••Zillion Equipment and Spare Parts Trading LLC~•• (UAE): multiple phone numbers and email addresses These service centers provide repair and maintenance services for various Black+Decker products, including vacuum cleaners and power tools. BLACK+DECKER guarantees the quality of its products and offers an exceptional warranty. This warranty statement adds to your statutory rights and does not prejudice them in any way. If a BLACK+DECKER product becomes defective due to material or manufacturing defects, or non-compliance, within 24 months of purchase date, the warranty allows for the replacement of faulty parts, repair, or exchange of products subject to normal wear and tear, except in cases where: • The product is used for commercial, professional, or rental purposes • The product is used improperly or with negligence • The product sustains damage caused by external objects, substances, or accidents • Unauthorized attempts at repair are made To submit a warranty claim, you must provide proof of purchase to the seller or authorized service representative. You can find the nearest authorized service center by contacting your local BLACK+DECKER agency. Alternatively, a list of authorized service centers and comprehensive information about our after-sales service, including contact details, is available online at www.2helpU.com. As for instructions: • Press the dust bag release button (2) and pull out the dust bag (3) to empty it. • While keeping the dust bag above a trash can or sink, remove the filter to empty the bag. • To replace the dust bag, reinsert it onto the handle until it clicks into place. Warning: Never use the appliance without filters. Clean filters are necessary for maximum dust collection. L'aspirateur humide Black+Decker nécessite une attention spécifique pour son entretien et sa maintenance correcte. ••# Avertissement N'utilisez jamais l'appareil pour aspirer des éléments humides sans que le défecteur et l'insert en mousse ne soient en place. ••# Instructions d'entretien • Le bac à poussière et les filtres peuvent être nettoyés à l'eau chaude savonneuse. • Assurez-vous que les filtres et le bac à poussière sont parfaitement secs avant de les réinstaller. ••# Remplacement des filtres Les filtres doivent être remplacés tous les 6 à 9 mois et chaque fois qu'ils sont usés ou endommagés. Des filtres de recharge sont disponibles auprès de votre revendeur Black+Decker. ••# Maintenance générale • Avant toute intervention de maintenance sur des outils électriques avec ou sans fil, éteignez l'appareil/outil, puis débranchez-le. • Nettoyez régulièrement les orifices de ventilation de votre appareil/outil/chargeur à l'aide d'une brosse souple ou d'un chiffon sec. • Collecte séparée. Ce produit ne doit pas être jeté avec les déchets domestiques normaux. ••# Informations sur le produit • Votre chargeur ne nécessite aucun entretien particulier, à l'exception d'un nettoyage régulier. • Black+Decker fournit un dispositif permettant de collecter et de recycler les produits Black+Decker lorsqu'ils ont atteint la fin de leur cycle de vie. Before using your device for the first time, make sure the battery is fully charged for at least 24 hours. Before charging, remove any liquid and dry the device thoroughly to prevent damage. To charge the battery, use the provided charging station (only compatible with certain models) and follow these steps: 1. Ensure the device is turned off. 2. Place the device on the charging base. 3. Connect the charger to a power outlet. 4. Leave the device to charge for at least 21 hours. Note: The charger may get warm during the charging process, which is normal and not an indication of a problem. The device can be left connected to the charger permanently. However, do not charge the battery if the ambient temperature is below 10°C or above 40°C. To recharge the battery using the jack (only compatible with certain models), follow these steps: 1. Ensure the device is turned off. 2. Insert the charging jack into the charging port. 3. Connect the charger to a power outlet. 4. Leave the device to charge for at least 21 hours. Note: The charger may get warm during the charging process, which is normal and not an indication of a problem. To use your device, press and hold the on/off button until it turns on. To turn it off, release the button. For daily cleaning, use your device without the crevice tool to vacuum up dry debris. Never use water with this device. The device can also be used to suck up small amounts of liquid. For hard, non-absorbent surfaces, use the crevice tool. On absorbent surfaces like carpets, use the device without the crevice tool for better results. To clean your device after using it, immediately wipe it down and clean the filter. Failure to do so may lead to mold growth. Before charging, always remove any liquid and dry the device thoroughly to prevent damage. To keep the suction power of your device at its maximum, regularly clean the filters. They are reusable and should be cleaned frequently. If you come into contact with the device or its contents on your skin or eyes, follow the instructions below. Using the charger may cause injuries or material damage. If you come into contact with your skin, rinse immediately with water. In case of redness, pain, or irritation, consult a doctor. If you get it in your eyes, rinse immediately and see a doctor. Your charger is designed for a specific voltage. Always check that the network voltage corresponds to the voltage on the label and technical data sheet. Warning! Never try to replace the charging module with a standard wall socket. Only use your BLACK+DECKER charger to recharge the battery of the appliance/tool it was provided with. Other batteries may explode, causing injuries and damage. Never attempt to recharge non-rechargeable batteries. If the power cord is damaged, it must be replaced by the manufacturer or an authorized BLACK+DECKER service center to prevent accidents. Do not expose the charger to water. Do not open the charger. Do not probe the charger. During charging, place the appliance/tool/battery in a well-ventilated area. Your charger has been designed for a specific voltage. Always check that the network voltage corresponds to the voltage on the label. Read this manual carefully before using the device. This tool is double-insulated and does not require grounding. Always ensure that the electrical supply matches the tension mentioned on the label. The charging base can only be used indoors. Labels on the device Symbols appear on the device with a code date: NVC115JL-B5/NVC115WA-B5/WDC115WA-B5 To use only with charger S003BDV0500015 WDC215WA-B5 To use only with charger S003BEV0820015 This tool has some or all of the following elements: 1. On/Off switch 2. Release button for dustpan 3. Dustpan 4. Charging station (NVC115WA-B5, WDC115WA-B5, and WDC215WA-B5 only) 4a. Power jack charging port (NVC115JL-B5 only) 5. Handle 6. Brush (NVC115WA-B5, WDC115WA-B5, and WDC215WA-B5 only) 7. Flat suction (NVC115WA-B5 only) 8. Rake (WDC115WA-B5 and WDC215WA-B5 only) 10. Fabric filter for dust (NVC only) 11. Pre-filter (NVC only) 12. Foam insert for water and dust (WDC only) 13. Deflector for water and dust (WDC only) Wall installation (NVC115WA-B5, WDC115WA-B5, and WDC215WA-B5 only). (Fig. B) To make it easier to store and charge the device, the device can be fixed to a wall. For wall installation, ensure that the fixation is suitable for the type of wall and weight of the device. Find screw holes (near an electrical outlet to recharge the vacuum when it's fixed on a wall mount). Install the wall-mounting bracket using appropriate screws and brackets for the type of wall and weight of the device. Hang the device on the wall by placing the opening at the base of the vacuum on the hook in the charging station wall mount. Accessories Avant de commencer, assurez-vous de comprendre les dangers potentiels liés à l'utilisation du produit. Les blessures peuvent survenir en raison d'un contact avec des pièces brûlantes ou dues au changement de pièces ou d'accessoires. Il est également possible que les blessures soient provoquées par une utilisation prolongée de l'appareil. Lorsque vous utilisez l'appareil pendant des périodes longues, assurez-vous de prendre régulièrement des pauses pour éviter tout risque. Les batteries sont soumises à certaines règles d'utilisation pour assurer leur sécurité et durée de vie : - Ne les ouvrez sous aucun prétexte. - N'exposez pas la batterie à l'eau, ni à la chaleur. - Ne la rangez pas dans des endroits où la température peut dépasser 40°C. - Ne procédez à la charge qu'à une température ambiante comprise entre 10°C et 40°C. - Utilisez toujours le chargeur fourni avec l'appareil/outil pour éviter tout risque de choc électrique ou surchauffe. Pour éliminer les batteries, suivez les instructions mentionnées dans la section "Protection de l'environnement". Ne déformez pas ni n'endommagez le bloc-batterie, car cela pourrait entraîner des blessures et un incendie. Si vous détectez une fuite de batterie en conditions extrêmes, utilisez un chiffon pour essuyer le liquide avec précaution. Évitez tout contact avec la peau. La garantie proposée par BLACK+DECKER est d'une durée de 24 mois à compter de la date d'achat. Elle couvre les défauts en raison de matériaux défectueux, de médiocrité de l'usinage ou de non-conformité. Cependant, il existe certaines exceptions : - Le produit doit avoir été utilisé pour des fins personnelles et non commerciales. - Il ne doit pas avoir été soumis à un usage abusif ou négligent. - Il ne doit pas avoir subi de dommages en raison d'objets étrangers, de substances ou d'accidents. - Les réparations doivent avoir été effectuées par des agents autorisés ou du personnel de BLACK+DECKER. Pour faire valoir votre droit à la garantie, vous devez fournir une preuve d'achat au vendeur ou à un agent de réparation autorisé. Vous pouvez trouver l'emplacement de votre agence de réparation autorisée en contactant le bureau local de BLACK+DECKER à l'adresse indiquée dans ce manuel. Alternativement, vous pouvez consulter la liste des agents de réparation autorisés et les détails complets du service après-vente sur Internet à l'adresse : www.2helpU.com. BLACK AND DECKER (OVERSEAS) GMBH (DUBAI BRANCH) PO Box 17164, Dubai, United Arab Emirates Pour optimiser la force de succion, il est essentiel de nettoyer régulièrement les filtres lors de l'utilisation. Vérifiez également que vous avez remplacé les filtres usés. Lors du démontage et de la réparation de l'appareil, veillez à suivre attentivement les instructions pour éviter tout risque ou dommage. Given article text here Using accessories with your appliance: You'll need a squeegee tool for wet surfaces (not furniture or stairs), a brush tool for pet hair removal, and a crevice tool for tight spaces. Note that you shouldn't use the pet brush on pets themselves. Insert each accessory into the front of the device. Charging your appliance's battery: First, make sure it's turned off before charging. Use the charger base (for specific models) or plug in the jack for others. Leave it to charge for 21 hours minimum. It may get warm during this time, which is normal. Switching on and off: Press and hold the switch to turn it on; release it to switch off. Additional tips: For dry spills, use your appliance without the squeegee accessory. For wet spills, use the accessory on hard surfaces or no accessory on absorbent ones like carpet. Don't fill the bowl too much when picking up liquids, and clean everything thoroughly afterward. • Either by puncture or impact, this can create risk of injury and fire. • Do not charge damaged batteries. • Under extreme conditions, battery leakage may occur. When you notice liquid on the batteries carefully wipe the liquid off using a cloth. Avoid skin contact. • In case of skin or eye contact, follow instructions below.Warning! The battery fluid may cause personal injury or damage to property. In case of skin contact, immediately rinse with water. If redness, pain or irritation occurs seek medical attention. In case of eye contact, rinse immediately with clean water and seek medical attention.Your charger has been designed for a specific voltage. Always check that the mains voltage corresponds to the voltage on the rating plate and information in the technical data table.Warning! Never attempt to replace the charger unit with a regular mains plug. • Use your BLACK+DECKER charger only to charge the battery in the appliance/tool with which it was supplied. Other batteries could burst, causing personal injury and damage. • Never attempt to charge nonrechargeable batteries. • If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard. • Do not expose the charger to water. • Do not open the charger. • Do not probe the charger. • The appliance/tool/battery must be placed in a well ventilated area when charging.Your charger has been designed for a specific voltage. Always check that the mains voltage corresponds to the voltage on the rating plate. Never attempt to replace the charger unit with a regular mains plug. Read all of this manual carefully before using the appliance.This tool is double insulated; therefore no earth wire is required. Always check that the power supply corresponds to the voltage on the rating plate.The charging base is intended for indoor use only.The following symbols appear on this appliance along with the date code:NVC115JL-B5/NVC115WA-B5/WDC115WA-B5 Only use with chargerS003BDV0500015WDC215WA-B5 Only use with chargerS003BEV0820015This tool includes some or all of the following features.1. On/off switch2. Bowl release button3. Dust bowl4. Charger base (NVC115WA-B5, WDC115WA-B5, WDC215WA-B5 units only).4a. Charger jack plug (NVC115JL-B5 unit only).5. Handle6. Brush tool (NVC115WA-B5, WDC115WA-B5 and WDC215WA-B5 Only)7. Crevice tool (NVC115WA-B5 Only)8. Squeegee (WDC115WA-B5 and WDC215WA-B5 units Only)10. Dry pick up cloth filter (NVC units Only)11. Pre-filter (NVC units Only)12. Wet/Dry foam insert (WDC units Only)13. Wet/Dry deflector (WDC units Only)Wall Mounting (WDC units Only)Wall Mounting (NVC115WA-B5, WDC115WA-B5, WDC215WA-B5 units only). (fig. B)The product can be attached to a wall to provide a convenient storage and charging point for the appliance. When fixing to a wall, make sure that the fixing method is S003DV0500015S003BEV0820015Page 195(Original instructions)Your BLACK + DECKER Dustbuster® handheld vacuum cleaner has been designed for light dry vacuum cleaning purposes (NVC115JL-B5, NVC115WA-B5). This appliance is intended for household use only.Your BLACK + DECKER Dustbuster® handheld vacuum cleaner has been designed for light wet and dry vacuum cleaning purposes (WDC115WA-B5, WDC215WA-B5). This appliance is intended for household use only.Warning! Read all safety warnings and all instructions carefully before using the appliance. Warning: Proper Use and Safety Precautions for Appliance Use Following the guidelines outlined below will help minimize the risk of injury, damage, and fire when using the appliance. It is crucial to follow these safety measures carefully. Before use, read this manual thoroughly and ensure you understand the recommended usage. The manufacturer's instructions are designed to prevent accidents and personal injuries. Do not attempt to modify or repair the appliance without proper authorization from an authorized repair agent. Always check for damaged or defective parts before use and have them replaced immediately. When using the appliance, please be aware of the following safety guidelines: Never use the appliance near water or in locations with high temperatures (above 40°C). Avoid touching any moving parts or hot surfaces to prevent injuries. Regularly inspect the charger lead for damage and replace it if necessary. Do not expose the battery to water, heat, or extreme temperatures. Charge the battery only using the provided charger and at ambient temperatures between 10°C and 40°C. Never attempt to open the appliance for any reason. Supervise children aged 8 years and above when they use the appliance. Cleaning and user maintenance should be performed under adult supervision whenever necessary. Remember, even with proper safety measures in place, there is always a risk of accidents or injuries. Be cautious and follow these guidelines carefully to minimize the risks associated with using this appliance.